



GKX-300

LED LIGHTS GAMING KEYBOARD

USER'S MANUAL

MANUEL DE L'UTILISATEUR • MANUAL DE USUARIO • GEBRUIKERSHANDLEIDING
ISTRUZIONI D'USO • MANUAL DO UTILIZADOR • PODRĘCZNIK UŻYTKOWNIKA • ΟΔΗΓΙΕΣ ΧΡΗΣΗΣ



ENGLISH

FN+F1 Multimedia	FN+F7 Play/Pause
FN+F2 Volume down	FN+F8 Next
FN+F3 Volume up	FN+F9 Mail
FN+F4 Mute	FN+F10 Web/Home
FN+F5 Stop	FN+F11 Keyboard keys lock
FN+F6 Previous	FN+F12 Calculator

FRANÇAIS

FN+F1 Multimédia	FN+F7 Lecture/Pause
FN+F2 Baisser le volume	FN+F8 Suivante
FN+F3 Monter le volume	FN+F9 Mail
FN+F4 Silence	FN+F10 Web/Home
FN+F5 Stop	FN+F11 Blocage du clavier
FN+F6 Précédente	FN+F12 Calculatrice

ESPAÑOL

FN+F1 Multimedia	FN+F7 Reproducir/pausa
FN+F2 Bajar volumen	FN+F8 Siguiente
FN+F3 Subir volumen	FN+F9 Correo
FN+F4 Silencio	FN+F10 Web/Inicio
FN+F5 Stop	FN+F11 Bloquear teclado
FN+F6 Anterior	FN+F12 Calculadora

DEUTSCH

FN+F1 Medienverbund	FN+F7 Wiedergabe / Pause
FN+F2 Lautstärke verringern	FN+F8 Nächster
FN+F3 Lautstärke erhöhen	FN+F9 Elektronische Post
FN+F4 Stumm	FN+F10 Web / Start
FN+F5 Stop	FN+F11 Tastatur sperren
FN+F6 Voriger	FN+F12 Rechner

ITALIANO

FN+F1 Multimedia	FN+F7 Play / Pausa
FN+F2 Volume giù	FN+F8 Successiva
FN+F3 Volume alto	FN+F9 E-mail
FN+F4 Mute	FN+F10 Web/Home
FN+F5 Stop	FN+F11 Blocca la tastiera
FN+F6 Precedente	FN+F12 Calcolatrice

PORTUGUÊS

FN+F1 Multimidia	FN+F7 Reproduzir/Pausa
FN+F2 Volume baixo	FN+F8 Seguinte
FN+F3 Volume alto	FN+F9 Correio
FN+F4 Mudo	FN+F10 Web/Inicio
FN+F5 Stop	FN+F11 Bloquear teclado
FN+F6 Anterior	FN+F12 Calculadora

POLSKI

FN+F1 Multimedialny	FN+F7 Odtwarzaj/Zatrzymaj
FN+F2 Zmniejszenie głośności	FN+F8 Następna
FN+F3 Zwiększenie głośności	FN+F9 Poczta
FN+F4 Niemy	FN+F10 Internet/Start
FN+F5 Stop	FN+F11 Blokada klawiatury
FN+F6 Popzednia	FN+F12 Kalkulator

ΕΛΛΗΝΙΚΑ

FN+F1 Πολυμέδσα	FN+F7 Αναπαραγωγή / παύση
FN+F2 Μείωση έντασης	FN+F8 Επόμενο
FN+F3 Αύξηση έντασης	FN+F9 Ταχυδρομείο
FN+F4 άφωνος	FN+F10 Web / Home
FN+F5 Stop	FN+F11 κλειδωμα πληκτρων
FN+F6 Προηγούμενο	FN+F12 Αριθμομηχανή